

VEHICLE SERVICE TYPE BREAK DOWN SCHEDULE

Mini service "A": every 3000 km

Service mini 'A' at 3000 Km

- Clean the engine.
- Change the engine oil.
- Clean and drain the water separator.
- Clean the air filter
- Check the oil level: gearbox, transfer box, differentials, axles
- Check for water in the axles (if water mixed in, change the oil).
- Clean the axle breathers union and hose.
- Grease the transmission and steering system (8 nipples).
- Check the condition of the suspension: insulators (rubber bushes), spring blades and shock absorbers.
- Check the condition of the rear and the front engine mountings.
- Check the condition of the exhaust pipe and the insulators (rubber mountings).
- Check the condition and tension of the belt.
- Check the different warning lights of the dashboard.
- Wheel Alignment

Filter service 'B': every 6 000 km

Service 'A', plus:

- Change the diesel filter
- Change the oil filter.
- Check the clearance in front wheel hubs and front axle swilling boxes by shaking strongly the front wheels.
- Check the clearance in the steering system.
- Check the pads or shoes of the front breaks and correct if necessary

Complete service "C": every 12 000 km

Service 'B', plus:

- Change oil in gearbox, transfer box, axle.
- Check rear brake shoes.
- Grease hinges and locks of doors.
- Grease tilt mechanic of steering system.
- Change the tyres if necessary.